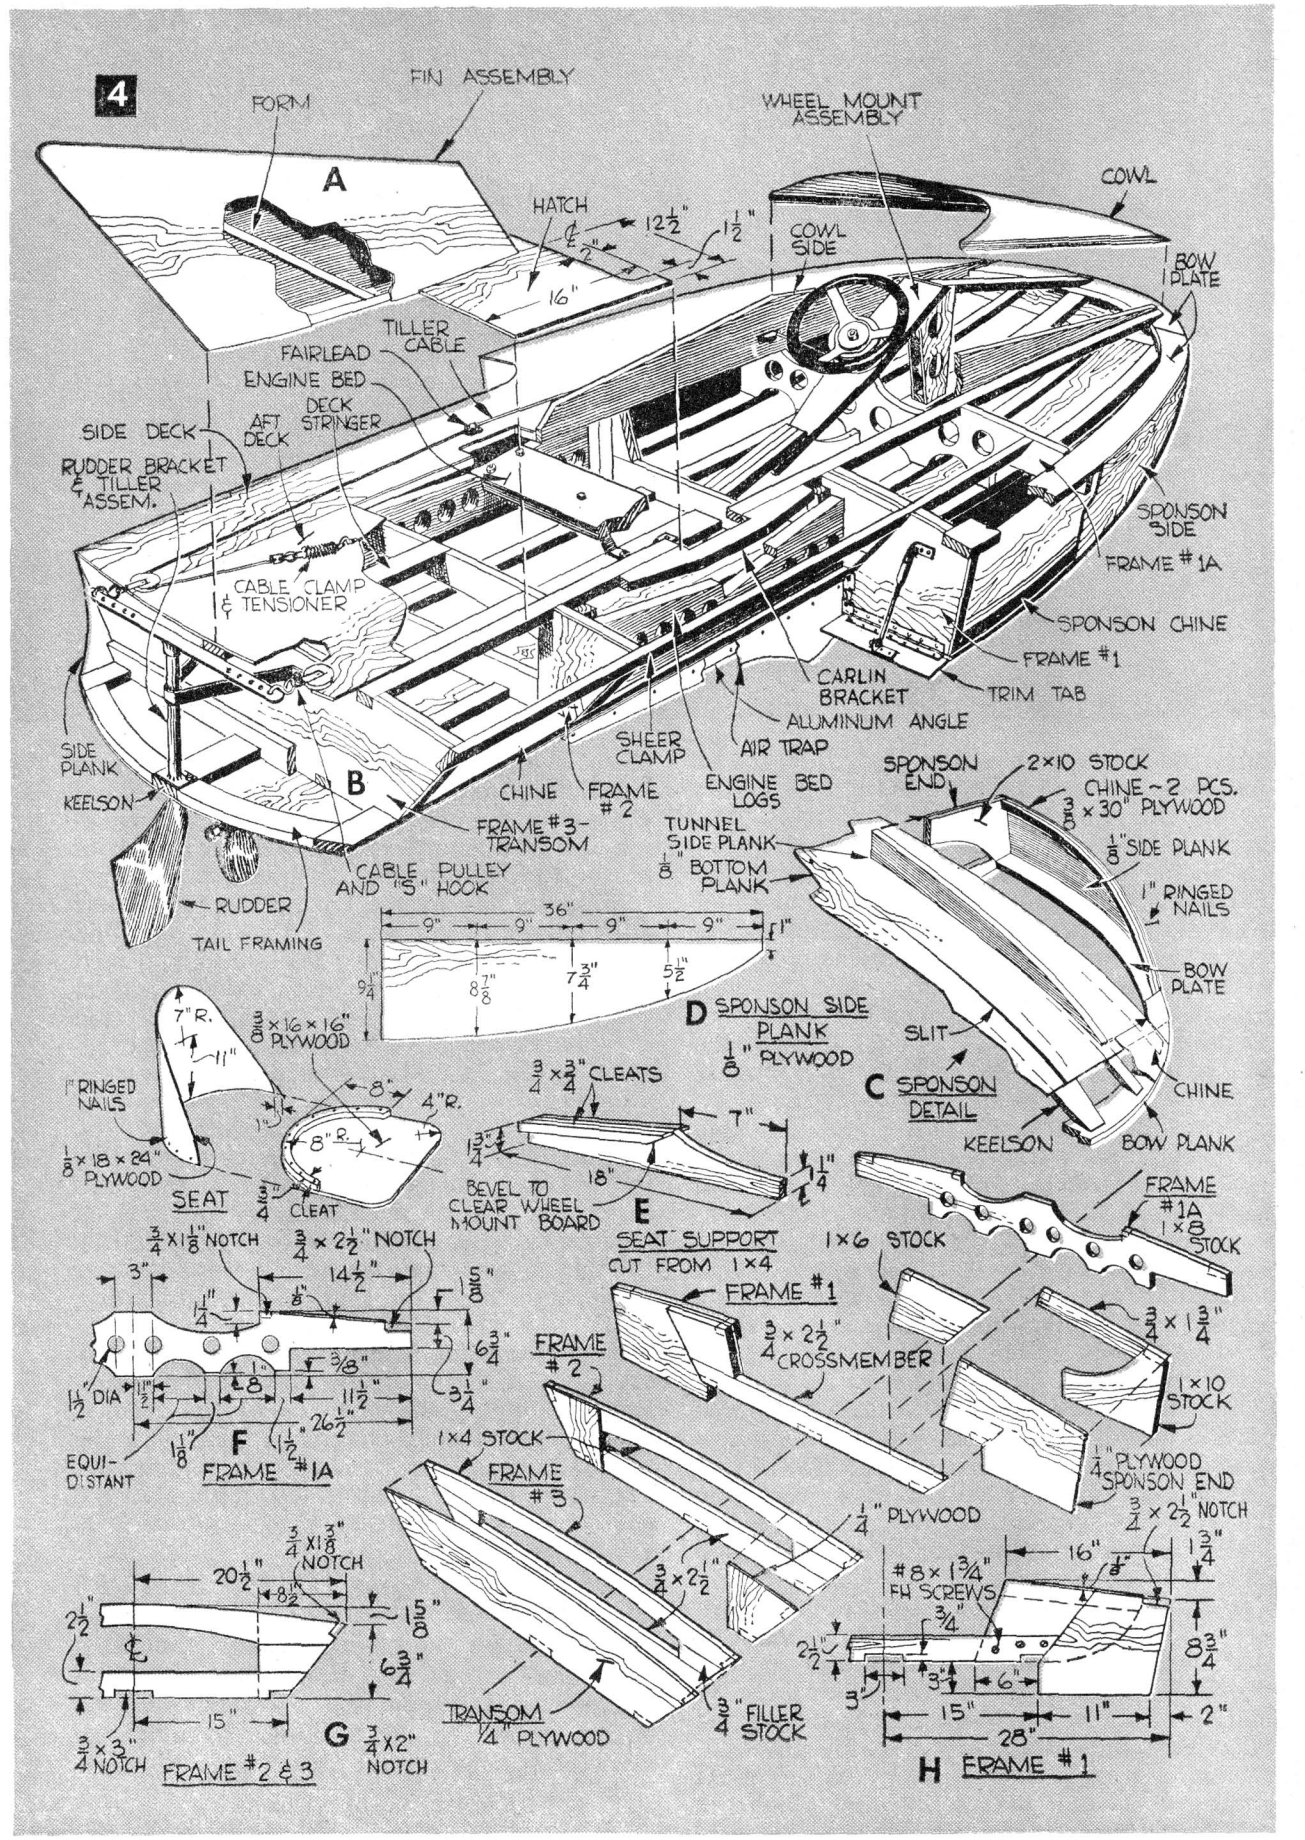
4
FIN ASSEMBLY
FORM
WHEEL MOUNT ASSEMBLY
A
COWL
HATCH
12½"
1½"
COWL SIDE
BOW PLATE
16"
TILLER CABLE
FAIRLEAD
ENGINE BED
DECK STRINGER
SIDE DECK
AFT DECK
RUDDER BRACKET & TILLER ASSEM.
SPONSON SIDE
FRAME #1A
CABLE CLAMP & TENSIONER
SPONSON CHINE
FRAME #1
CARLIN BRACKET
TRIM TAB
ALUMINUM ANGLE
SIDE PLANK
SHEER CLAMP
AIR TRAP
KEELSON
B
CHINE
FRAME #2
ENGINE BED LOGS
SPONSON END
2×10 STOCK
CHINE ~ 2 PCS. ⅜×30" PLYWOOD
FRAME #3 TRANSOM
TUNNEL SIDE PLANK
⅛" SIDE PLANK
⅛" BOTTOM PLANK
1" RINGED NAILS
CABLE PULLEY AND "S" HOOK
RUDDER
TAIL FRAMING
36"
9"
1"
9¼"
8⅞"
7¾"
5½"
D SPONSON SIDE PLANK ⅛" PLYWOOD
BOW PLATE
SLIT
C SPONSON DETAIL
CHINE
KEELSON
BOW PLANK
7" R.
11"
⅜×16×16" PLYWOOD
8"
4" R.
8" R.
1" RINGED NAILS
⅛×18×24" PLYWOOD
SEAT
¾" CLEAT
¾×¾" CLEATS
7"
1¾"
18"
1¼"
BEVEL TO CLEAR WHEEL MOUNT BOARD
E SEAT SUPPORT CUT FROM 1×4
FRAME #1A 1×8 STOCK
1×6 STOCK
FRAME #1
¾×1¾"
¾×2½" CROSSMEMBER
FRAME #2
1×10 STOCK
¼" PLYWOOD SPONSON END
¾×1⅛" NOTCH
¾×2½" NOTCH
3"
14½"
1⅝"
1¼"
⅛"
6¾"
⅜"
1"
3¼"
1½" DIA
1½"
8"
11½"
26½"
1⅛"
EQUI-DISTANT
F FRAME #1A
1×4 STOCK
FRAME #3
¼" PLYWOOD
¾×2½"
#8×1¾" FH SCREWS
¾×1⅜" NOTCH
20½"
8½"
1⅝"
2½"
6¾"
15"
¾×3" NOTCH
G ¾×2" NOTCH
FRAME #2 & 3
TRANSOM ¼" PLYWOOD
¾" FILLER STOCK
16"
1¾"
8"
8¾"
2½"
3"
3"
6"
15"
11"
2"
28"
H FRAME #1