
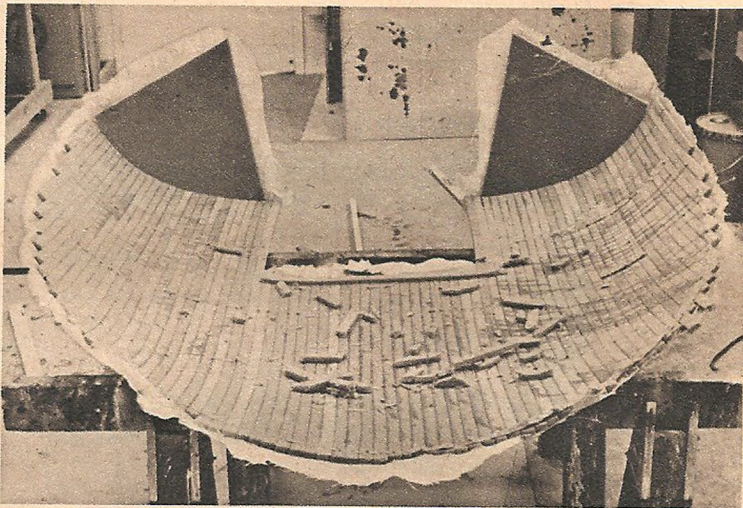


Hydroplane pour onto the foam. Spread with brush or squeegee and be sure to wet all of the foam especially near the edges. With an assistant, place the glass onto the foam, then use a squeegee to work the resin through the glass. Watch out for air pockets. If these develop, add more resin and work them out.

Use a felt-tipped marker to lay out the patterns on the glass, then cut apart with a saber saw. To further simplify construction, the two side pieces can be glassed on both sides before assembly. Do not cut on the line when trimming the side pieces from the large sheet. Leave excess material which you will

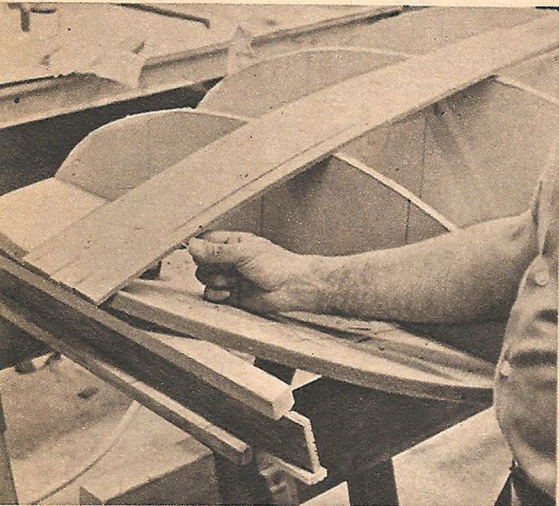

FOAM STRIPS are bent over temporary fore-deck form, pinned with toothpicks, glassed.

HOMASOTE bulkheads are removed and section flipped for glassing of underside.

SPONSONS are reinforced with small pieces of cloth, center section is also glassed.

EDGES are trimmed up with Surform tool, then bottoms are nailed before glassing.

